

**SEE ATTACHED MAP**

**Electric Specs**

All switched Decora Style dimmer  
Electric and Ethernet to both sides of island  
Electric and Ethernet to long counter

**Mudroom**

Outlets  
Light and Switch

**Middle Room**

Closet Light and Outlet  
Fan Box in Center w Switch in Switch 2  
Floor Outlet

**Family Rm**

Floor Outlet

**Nook**

DONE- Move Fan  
DONE - Pendants by back windows with  
Switch

**Kitchen**

Insinkerator switch (mounted to top of sink)  
Cooktop ignition  
Cooktop fan  
Oven  
Dishwasher  
Undercounter lights

**Outlets**

Floor Outlet in Family Room  
Floor Outlet in Middle Room  
Both ends of island  
Pantry microwave  
Along long counter  
Both sides of cooktop  
Refrigerator

**Ethernet**

Both ends of island

**Coax**

Move from behind refrigerator

DONE- Pull wire to right of fireplace--for speakers  
later--please leave in place

Switches--see diagram

**PLEASE ITEMIZE:**

Outlet in Family Rm floor  
Outlet in Middle Rm floor  
Pantry outlet

S1: by main entrance

a: 3-way to outside lights incl by garage (2nd  
switch in garage), existing  
b: 4-way to middle room, existing  
c: NEW switch to entrance fixture

S2: by closet

a: closet (existing)  
b: 4-way to middle room (existing)

S3: hallway

a: middle room (existing?)  
b: 3-way to hall (sensor, existing)  
c) 4-way to family room

S4: kitchen entrance

a: 3-way kitchen disks  
b: 3-way island pendants  
c: 4-way nook disks  
d: 4-way to family room?  
e: undercab lights

S5: family room

a: 4-way to family room  
b: 3-way island pendants

S6: nook 1

a: fan  
b: pendants  
c: 3-way to nook disks

S7: porch

a: porch lights (existing)  
b: porch fan (existing)  
NOT DESIRED: old 3 way to kitchen disks

Kitchen Island Pendants 3-way

Switch 4  
Switch 6

Nook Disks 3-way

Switch 6  
Switch 4

Family Room 4-way

Switch 3  
Switch 4  
Switch 5

Middle Room 4 way

Switch 1  
Switch 2  
Switch 3